

Diaper-Depot® Replacement Belt Instructions

Please Read All Instructions Before Beginning the Installation.

Models: Basic, Oval, Vertical

What is Included:

(1) Diaper-Depot Replacement Belt 

Tools Needed:

Screwdriver 

Note: Replacement screws available separately.

Step 1

Remove the old belt by opening the Diaper-Depot and unscrewing the two screws. Keep the screws for replacement belt. Discard the old belt.



Step 2

Using the screws from Step 1, screw the replacement belt onto the Diaper-Depot. Make sure the shorter side of the belt is attached on the wall mounted side of the Diaper-Depot. Tighten both sides securely.



Models: Horizontal

What is Included:

(1) Diaper-Depot Replacement Belt 


Tools Needed:

Screwdriver 

Note: Replacement screws available separately.



Step 1

Remove Diaper-Depot from the wall using a screwdriver. From the back of the unit, unscrew one side of the old belt. Open the Diaper-Depot and unscrew the other side of the belt. Discard the belt. Keep the screws for the replacement belt.

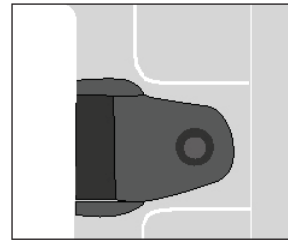


Step 2

Slide the end of the short side of the belt through the front of the Diaper-Depot to the back. Using the screws from Step 1, screw the replacement belt onto the Diaper-Depot. Tighten securely.

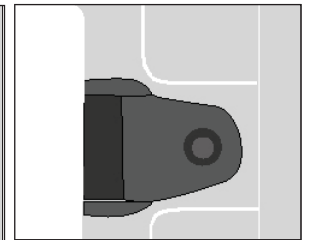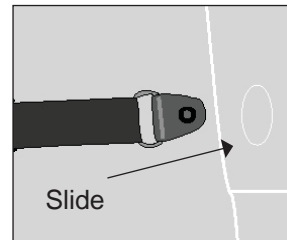

Step 3

Secure the longer side of the replacement belt to the Diaper-Depot using the second screw. Tighten securely. Remount the Diaper-Depot to the wall.

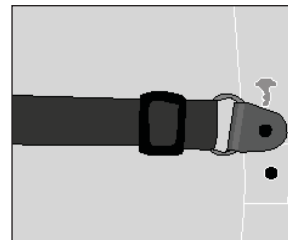

At Least Monthly... Inspect Diaper-Depot for damage
Check all fasteners for tightness to insure safety
Clean Diaper-Depot with mild detergent and a damp cloth