





Safe-Sitter™ Installation Instructions

Toilet Compartment/Dressing Room Compartment - Partition Mount Instructions



The enclosed hardware is for a “stall mounting” only. If you prefer to mount the unit directly to the bathroom wall, please use appropriate hardware to do so, or call us.

Mounting Hardware

- (4) Machine Screws 
- (4) Small Washers 
- (4) Large Washers 
- (4) Nylon Lock nuts 

Tools Needed:


- Drill with 9/32” Bit
- Screwdriver
- 7/16” Ratchet or Wrench

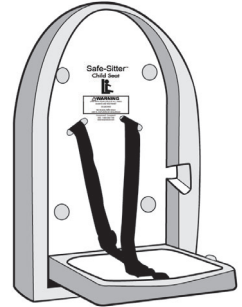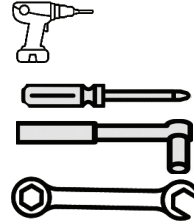

The Safe-Sitter is designed to fit in even the smallest rest room or changing room stall.

Before you begin, please note:

- Unit should be mounted in a convenient location at 20.5” from the floor. Mount on the inside side partitions of the stall - not on the door.
- Be sure there is enough clearance for the door to open and close when the Safe-Sitter is in the closed position.

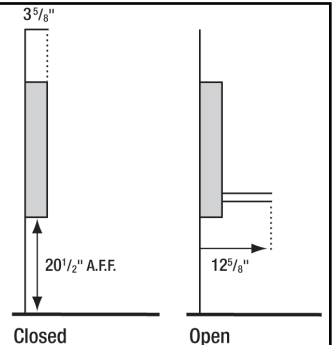

Installation:

1. Using a 9/32” bit, drill through the four mounting cups on the sitter.
2. Place the sitter on the provided template and verify the drilled holes align with the template hole locations. If they do not align, then transfer the drilled holes to the paper template.
3. Attach the template to the wall or surface making sure the dashed line at the bottom of the template is 20.5” from the floor and is level.
4. Drill holes in the stall partition at the marked points.
5. Place a small washer on each machine screw.
6. Insert a machine screw with a small washer through each of the four holes in the Safe-Sitter and then through the holes on the stall partition.
7. Place a large washer over the screw ends on the other side of the stall partition.
8. Place a nylon lock nut on the end of each screw and tighten securely with a ratchet or wrench.

Maintenance:

- To ensure safety, be sure to periodically check and tighten all mounting hardware.
- Clean the Safe-Sitter with a mild soap and water solution or with a mild glass or counter cleaner.
- Do not use any strong chemical cleaners.